


1. Turn on

- 1 Activate Maya and its Wi-Fi mode as shown in the diagram below.

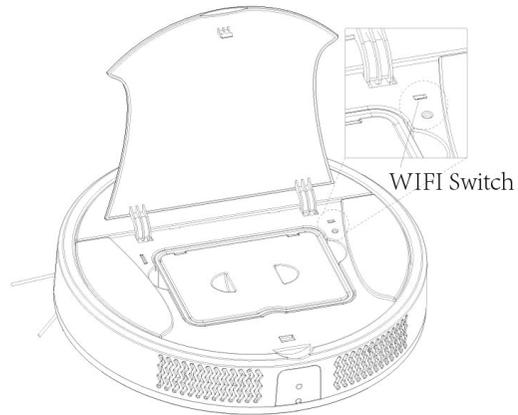

2. Local connection (for home-only control)

- 5 To control your Maya, select the device from the sheet. Blue color indicates that Maya is connected.



2. Local connection (for home-only control)

- 1 Connect your phone to Maya's Wi-Fi network (Wi-Fi network's name starts with "SV-ROBOT")



- 2.2. Once you have connected to the Maya Wi-Fi network, open Maya's application that you downloaded earlier and press the "+" button located in the top right corner.



3. Connect Maya to a Wi-Fi router.

- 1 Double-tap the monitor on the control screen to go back.
- 2 Press the "+" button located in the top right corner.




2. Local connection (for home-only control)

- 3 Select "Local Search" menu.



- 4 1. Select the available device.
2. In the next screen, save with the "Save" button.

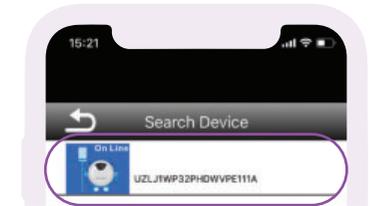


3. Connect Maya to a Wi-Fi router.

- 4 Select your Wi-Fi network and enter a password.




- 5 Select the available device. On the next screen, save with the "Save" button.

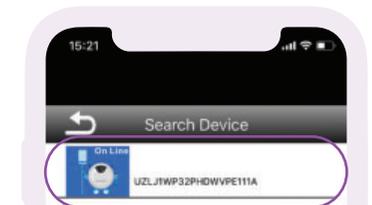


3. Connect Maya to a Wi-Fi router.

- 6 Select your Maya to manage it remotely.
- 7 Maya's control screen

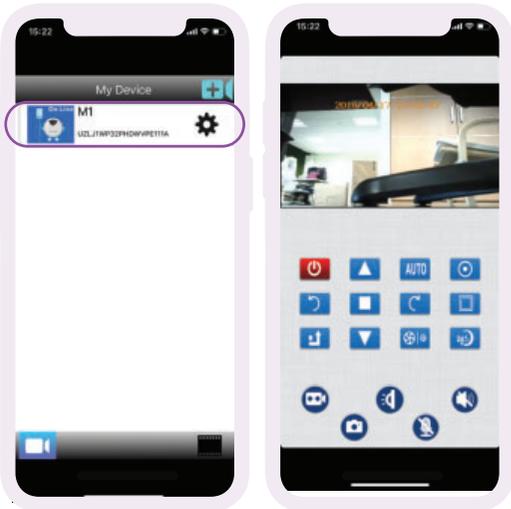


4. Remote control (when you are not at home)

- 1 Open Maya's mobile app.
- 2 Select your Maya. Once it lights in blue, it means is active.
- 3 When you start the home screen, you can manage Maya from a distance.

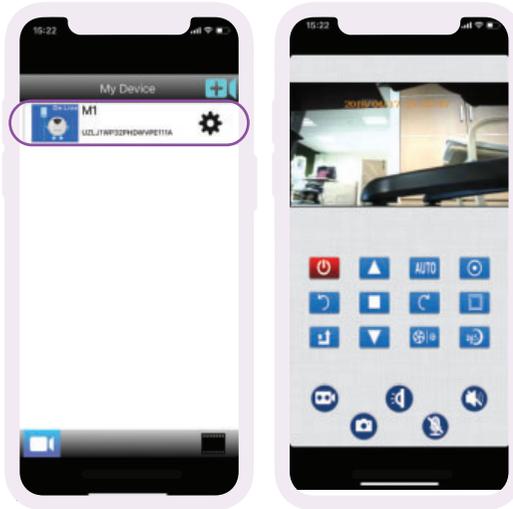

5. Save and delete video files

- 1 Open Maya's mobile app.
- 2 Select the video file icon.
- 3 Select the available device.

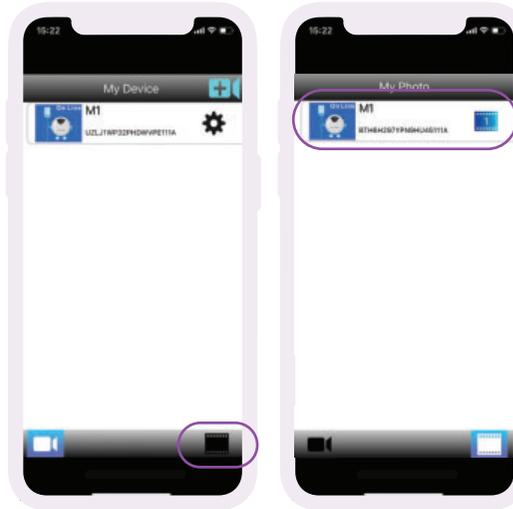


5. Save and delete video files

Download file

To download the video file, select the desired file and click on the download icon.

Delete file


To delete the video file, select the desired file and click on the delete icon.

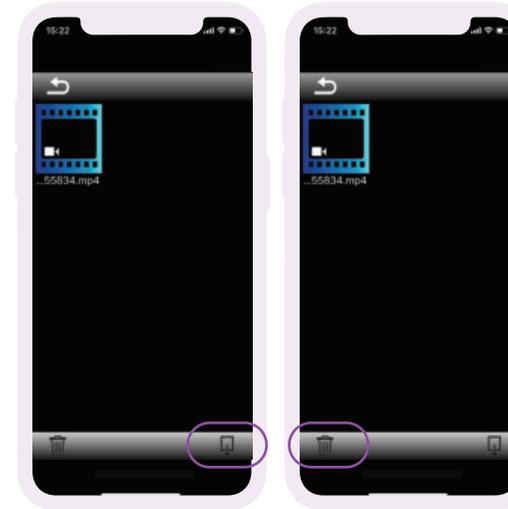

6. Other settings

Change data


From the main screen, select the settings icon. To change the device name and password, select "Device details". Once you are done with the changes, click "Save".

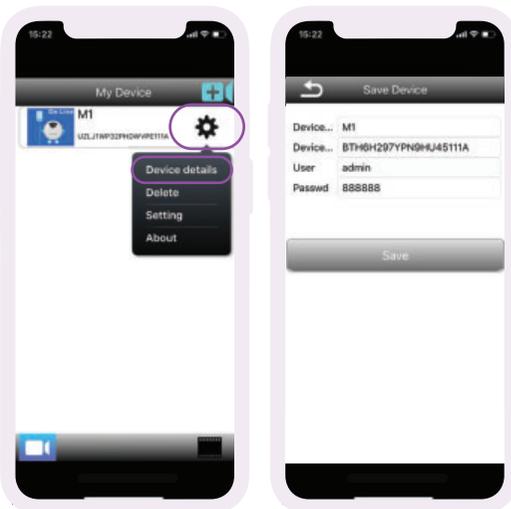

6. Other settings


Camera settings

From the main screen, select the settings icon. To change the video recording settings, select "Settings". Once you are done with the changes, click "Save".

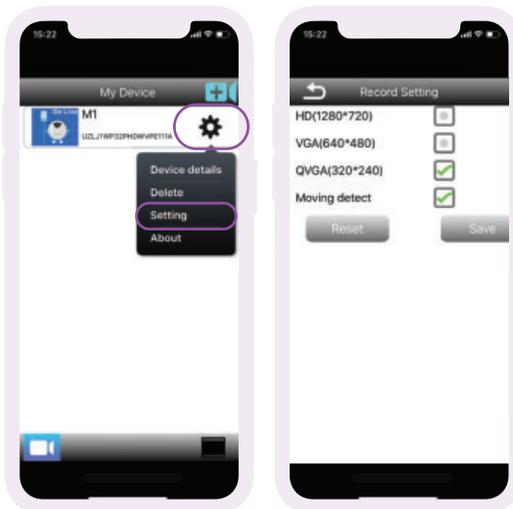

7. Buttons description on control screen

- Turn on
- Automatic mode
- "Spot-cleaning" mode
- Forward
- Left
- Pause
- Right
- Backwards
- "Corner cleaning" mode

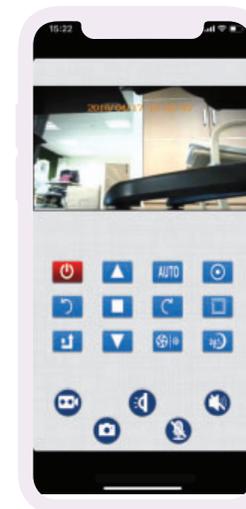

- Loading
- Intake power
- 24-hour program
- Record video
- Take a photo
- Low visibility mode
- Microphone
- Sound